

EAR-001 & EAR-002 MODELS

SIL3 PLe SAFETY ENCODER SIGNAL SPLITTERS

Introduction

The Functional Safety splitter is a certified data interface that is designed to integrate into a safety loop.

Its construction allows it to easily integrate an encoder with safety motion controllers, while also providing a secondary set of data outputs for a standard motion controller. The primary signal from the splitter is 100% compatible with BEI Sensors/Sensata Safety motion controllers and safety relays. While the secondary signal (or repeater) provides encoder signals for an additional industrial grade (non-Functional Safety) motion controller (drive, display, PLC, etc.)



Features

- Usable with standard and Safety encoders
- Suitable for simultaneous safe and non-safe motor feedback connections
- TTL/RS422, HTL or sine 1Vpp encoder interfaces
- Safe output: same as connected encoder interface
- Non-safe output: TTL/RS422 or HTL user selectable
- Power supply for encoders: 5Vdc or 11-30Vdc user selectable

Applications

- Automated machine tools
- Safety lock-out systems
- Robotic assembly
- Conveyor and web-based systems (packaging, inspection, cartonizing)

SPECIFICATIONS

Mechanical

	EAR-001	EAR-002
Housing Material	Polyamid, red color	
Dimensions (W x H x D)	22.5 x 108 x 114.5mm	
Fixing mode	DIN rail	
Weight	140g	

Electrical

	EAR-001	EAR-002
Splitter power supply +Vin	11-30Vdc  250mA (*)	
Encoder power supply	Selectable : +Vin or 5Vdc, 200mA max.	+Vin, 200mA max.
Max encoder frequency	300kHz	
Encoder input	TTL/RS422 or sine 1Vpp	HTL
Safe output (Direct encoder signals transmission)	Same as interfaced encoder	HTL
Secondary output (Not safety rated)	Selectable: TTL/RS422 or HTL	
Encoder input connection	Terminal blocks	

Secondary output connection	Terminal blocks
Safe output connection	RJ45 connector

(*) Device must be supplied by a Class 2 LPS or SELV/PELV limited energy source $\leq 60V$.

Functional Safety Parameters

The splitter does not contribute to the overall failure rate (safety chain) since it has no own failure modes or diagnostics.


The safety-related parameters are dependent on the connected encoder and safety controller and can reach up to SIL 3 / PLe Cat 4.

Environmental & Standards Conformity


Protection (EN 60529)	IP20
Humidity (EN 60068-2-38)	93% @ 65°C for electronics (Housing may show mechanical deformations when cumulating high humidity with high temperature cycles)
Shock (EN60068-2-27)	300m.s ⁻² (during 11 ms)
Vibration (EN60068-2-6)	Amplitude 3.5 mm or acceleration 50 m.s ⁻² (10 ... 200 Hz)
Operating temperature	-20°C to +65°C
Storage temperature	-20°C to +70°C
EMC Immunity Test	EN 61000-6-2:2016, increased levels in accordance with IEC 62061
EMC Emission Test	EN 61000-6-4:2018, increased levels in accordance with IEC 62061
Isolation	500 Veff
Functional safety	IEC 61508
	IEC 62061
	ISO 13849-1
	IEC 61800-5-2
Splitters usable up to SIL3 / PLe with specific requirements, see safety user manual for details.	

Electrical Connections

RJ45 Wiring (SAFE output)		
PIN	SIGNAL	EAR-001 & EAR-002 FUNCTION
1	+V ENCODER	Encoder power supply +V output for monitoring purpose
2	0V	Encoder power supply 0V
3	N/C	Reserved
4	A ENCODER	A signal - SAFE output
5	A/ ENCODER	A/ signal - SAFE output
6	N/C	Reserved
7	B ENCODER	B signal - SAFE output
8	B/ ENCODER	B/ signal - SAFE output

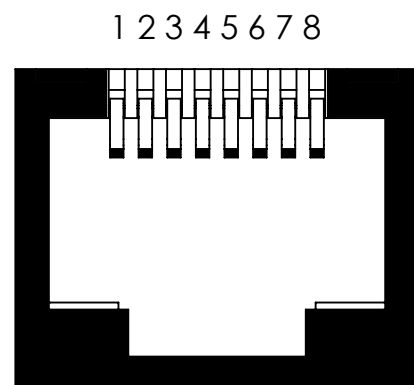


Terminal blocks wiring			
PIN	SIGNAL	EAR-001 FUNCTION	EAR-002 FUNCTION
1	+Vin	Splitter power supply : +24Vdc	
2	Z SECONDARY	Z signal - SECONDARY output	
3	Z/ SECONDARY	Z/ signal - SECONDARY output	
4	0V	Splitter power supply ground	
5	+V ENCODER	Encoder power supply output	
6	Z ENCODER	Z signal - ENCODER input	
7	Z/ ENCODER	Z/ signal - ENCODER input	
8	0V ENCODER	Encoder power supply: 0V (internally connected to PIN 4)	
9	A SECONDARY	A signal - SECONDARY output	
10	A/ SECONDARY	A/ signal - SECONDARY output	
11	B SECONDARY	B signal - SECONDARY output	
12	B/ SECONDARY	B/ signal - SECONDARY output	
13	A ENCODER	A signal - ENCODER input	
14	A/ ENCODER	A/ signal - ENCODER input	
15	B ENCODER	B signal - ENCODER input	
16	B/ ENCODER	B/ signal - ENCODER input	
17 18 19	SECONDARY output selection	Pin 18 connected to 17 = TTL/RS422 (factory jumper preconfiguration) Pin 18 connected to 19 = HTL	
20	SHIELD	SECONDARY output cable shield connection	
21 22 23	ENCODER power supply selection	Pin 22 connected to 21 = +5Vdc (factory jumper preconfiguration) Pin 22 connected to 23 = +24Vdc	
24	SHIELD	Encoder cable shield connection	

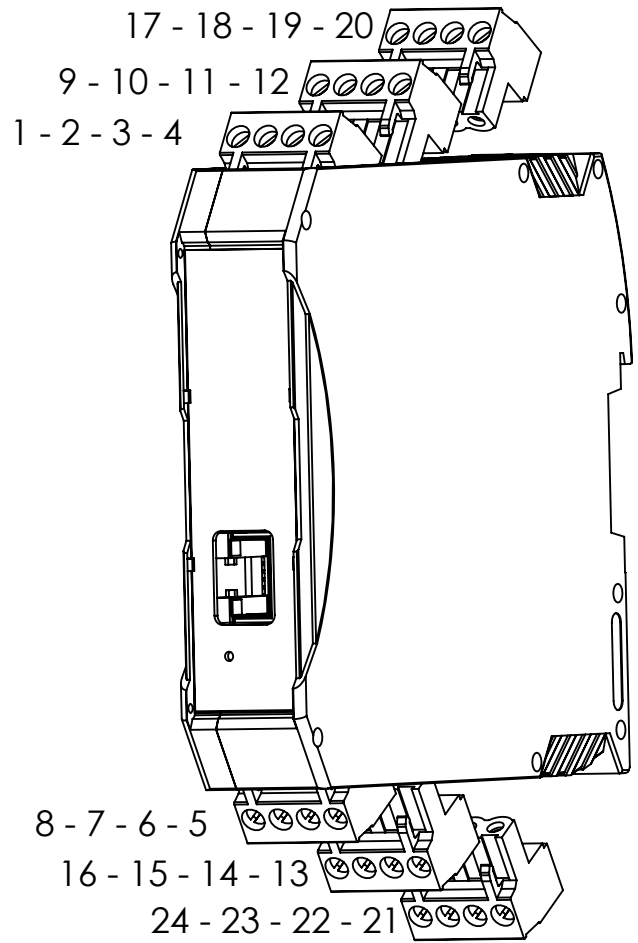

DIMENSIONS


Dimensions are in millimeters

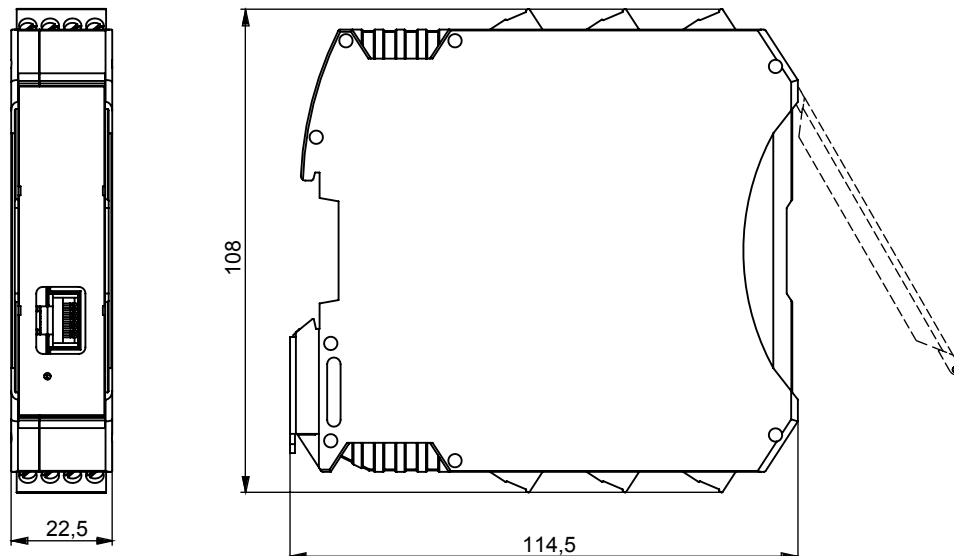



INSTALLATION

1. Clip the splitter on the DIN rail.
2. Check the power supply is switched off and make the terminal blocks electrical connections per wiring table printed on the product.
3. Check or configure the jumpers' positions.
4. Plug the RJ45 cord from the splitter to the safety motion controller.
5. Power on the devices.

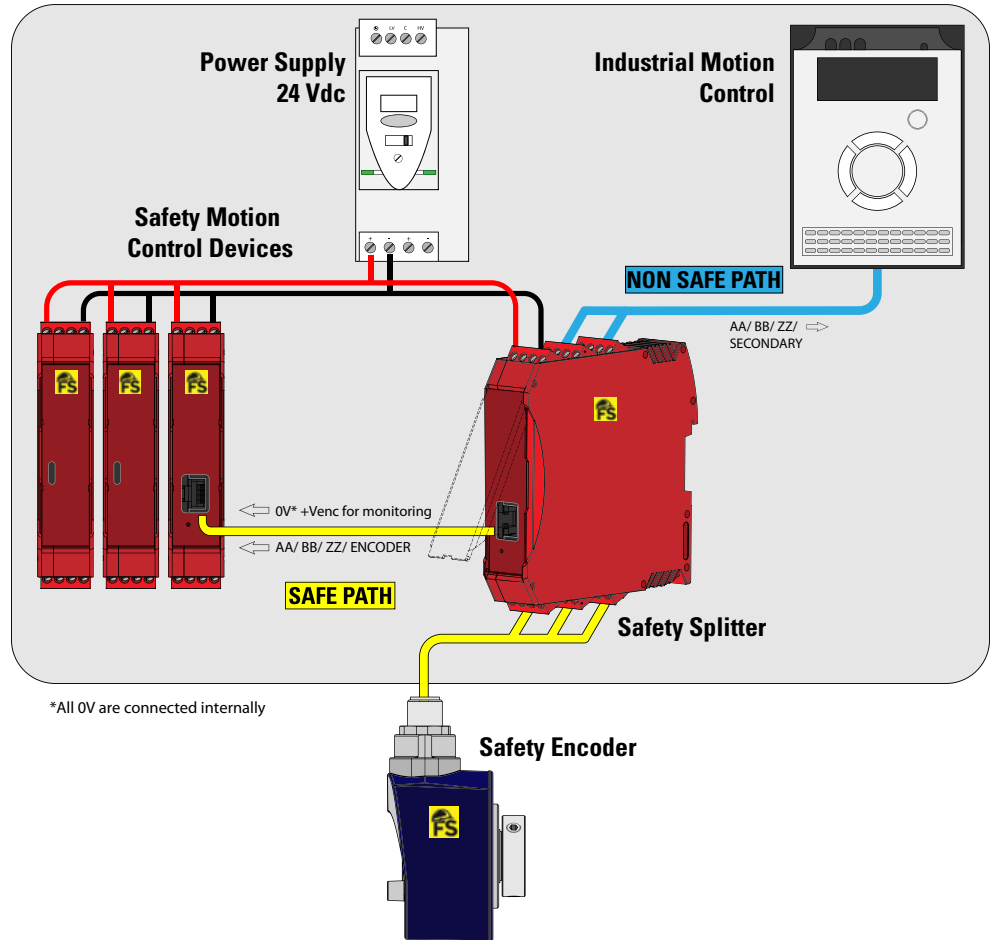

Splitters in association with RJ45 cables (see accessories section) are compatible with safety motion controllers from BEI Sensors partners:

- EAR-001 can be connected to NEG0003001 and NEG0003002.
- EAR-002 can be connected to NEG0003003
- Other safety motion controllers with adapted RJ45 cable assemblies



GENERAL NOTES

For a safe installation according to the required safety level needed in the application, refer to the user safety User Manual. The safety User Manual provides the technical information (drawings, electrical data, etc...) for a safe integration.



ORDERING OPTIONS

Example : EAR-001/01/

	EAR	-	001	-	/01/
Family	EAR				
Model					
	001: Splitter for TTL/RS422 or sine 1Vpp encoder interface				
	002: Splitter for HTL encoder interface				
Option					
	Blank: Standard (Screw terminal blocks)				
	/01/: Push-in terminal blocks				



AGENCY APPROVALS & CERTIFICATIONS






BEI Sensors SAS Sensata Technologies

Espace Européen de l'Entreprise
9, rue de Copenhague
B.P. 70044 Schiltigheim
F 67013 Strasbourg Cedex

Tél : +33 (0)3 88 20 80 80
Fax : +33 (0)3 88 20 87 87
Mail : position-info.eu@sensata.com
Web : www.sensata.com



ACCESSORIES

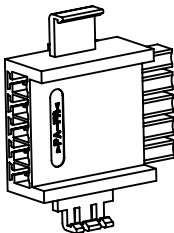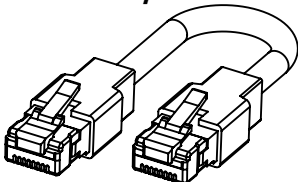Description	Part Number
Jumper 	8213/105
Bus Connector 	NEG0003008
RJ45 Connection to safety module 	NEG0003010 = RJ45 - cable 0.15m - RJ45 NEG0003011 = RJ45 - cable 0.30m - RJ45 NEG0003012 = RJ45 - cable 0.50m - RJ45

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

CONTACT US

Americas

+1 (800) 350 2727 – Option 1
sales.beisensors@sensata.com

Europe, Middle East & Africa

+33 (3) 88 20 8080
position-info.eu@sensata.com

Asia Pacific

sales.isasia@list.sensata.com
China +86 (21) 2306 1500

Japan +81 (45) 277 7117

Korea +82 (31) 601 2004

India +91 (80) 67920890

Rest of Asia +886 (2) 27602006
ext 2808